




Installation Instructions

It's easy as 1,2,3...

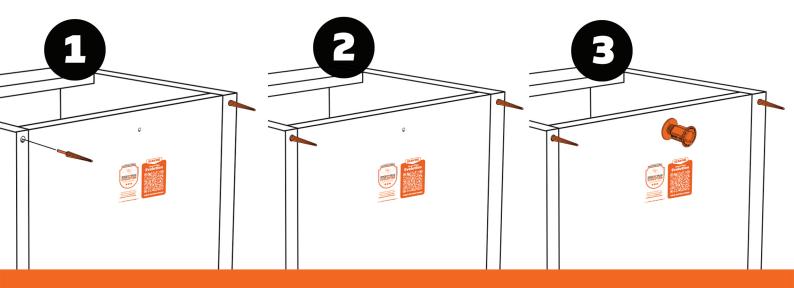

STEP **ONE**

Place the **Datum**Pegs in the
predrilled holes &
offer the cabinet
to the wall – never
a need to scribe!

STEP TWO

The **Datum Pegs**ensure the correct
space for worktops
– adjust the
frontage to perfection
& connect.

STEP **THREE**

Now get a fast, accurate robust fit with your Space-Plug Adjustable Spacer Fixing.

Follow these **3 simple steps** for a **faster**, **neater** & **professional** install. www.evolve-with-space-plug.com/instructions







Not used one of these before?

Adjustable Spacer Fixings

Learn how, scan the QR CODE or visit www.evolve-with-space-plug.com/instructions

